

Product Description

Xiaobai & Welcome Device

A1

V1.0

Thank you for choosing the product

Working Principle

The induction window is aimed at people. When the customers go in and out, the bell will ring. (The machine senses the change of the temperature and should not be installed in high temperature or air vents)

Installation Method

Installation on the top of door

It is recommended to install the machine at the top of the door at a height of less than 3 meters above the ground inside the house (or on the door frame).

side mounting

It is recommended to install the machine on the door at a height of 1.2m to 1.5m

There are two modes to choose from

- Welcoming Mode**
When the customer enters the sensing area, the machine will say "Welcome"! After 3 seconds, if someone pass by, the machine will sense and say again.
- Intelligent Mode**
When the customers walk back and forth in the sensing area, the machine will be intelligently mute (suitable for frequent walking in the store).

Demonstration of Intelligent Mode

Usage Steps

- Turn on the machine**
- Select the voice** / **Adjust the volume**
- Install the machine**

Stick the double-sided adhesive to the bottom of the bracket and install the machine on the top of the door

Key Instruction

- Music selection key
- Built-in indicator light
- Volume key
- Infrared induction window
- Rotating bracket (detachable)
- Speaker mouth
- Battery slot

ON: Welcoming mode
M: Intelligent mode
OFF: power off

Accessories

- Masking paper (you can reduce the induction range and paste it on the side with large range, as shown in the picture)
- Expansion screws, mounting accessories
- Double faced adhesive tape, mounting accessories

How much you want to shrink depends on how much sensor window you block.

Common After-sales Solutions

Vocalization disorder

- When the sensing window of the machine faces the desktop and doesn't ring, adjust the installation position and the sensing range. If the machine still rings abnormally, charge it for 2-3 hours and replace the battery with a new one.
- After the first test, if the machine still rings abnormally, please contact the customer service.

Press the button will ring but cannot sense

Put the machine on the table, point the sensor window at yourself and walk back and forth to test:

- If the machine rings, then adjust the installation position.
- If the machine doesn't ring, then send it back to repair.

The indicator light is on and the key has no sound

- After the machine is turned on, press the music key. If there is no sound, send it back for repair.

Several reasons why the power is not on

- The machine needs to be charged, please charge the machine for 1-2 hours
- The machine is plug-in. It is recommended to use battery to test if there are any problems of the power cord. If yes, please replace the power cord. If no, please send it back for repair.
- If the machine needs to be charged, please replace the battery.

Technical Parameters

Technical Parameters	Host
Voltage Range	1.5V AAA batteries*3 or DC5V 1A Micro USB Interface Power Supply
Operating Temperature	-10°C -35°C
Sensing Range	Up and down 60°, Left and right 110°
Induction Distance	0-5m
Product size	70mm*70mm*40mm
Volume	75db-95db±5db
Power Consumption	Working Power 0.5W Static Power 0.0025W
Standard Speech	1. Ding Dong, Welcome 2. Welcome 3. Welcome (Chinese) 4. Welcome (German) 5. Welcome (French) 6. Welcome (Italian) 7. Welcome (Korean) 8. Welcome (Japanese) 9. Welcome (Thai) 10. Welcome (Spanish)

11. Welcome (Russian)
12. Welcome (Hindi)
13. Welcome (Portuguese)
14. Welcome (Arabic)
15. Ding Dong Ding Dong
16. Happy Valentine's Day
17. Happy Halloween
18. Happy Thanksgiving
19. Merry Christmas
20. Ding Dong
21. Waltz in C major
22. May you be happy and prosperous
23. Jingle Bells
24. London Bridge
25. Alarm (20 seconds)

55*70mm